

6. Start the engine of the disabled vehicle.  
**Note:** *Do not switch on any electrical circuits of the disabled vehicle until after the jump leads are removed.*
7. Allow both vehicles to idle for two minutes.
8. Switch off the donor vehicle.
9. Disconnect the negative (Black) jump lead from the previously disabled vehicle.
10. Disconnect the negative (Black) jump lead from the donor vehicle.
11. Disconnect the positive (Red) jump lead from the previously discharged battery.
12. Disconnect the positive (Red) jump lead from the donor vehicle.

### STARTING A DISABLED VEHICLE USING A STARTING AID

To start the vehicle using a starting aid or a booster battery, follow the instructions in the sequence given.

1. Connect the positive (Red) jump lead to the positive (+) battery terminal of the discharged battery.
2. Connect the negative (Black) jump lead to the vehicle earth point.
3. Start the engine and allow it to idle.
4. Disconnect the negative (Black) jump lead from the battery terminal of the vehicle.
5. Disconnect the positive (Red) jump lead from the battery terminal of the vehicle.

### REMOVING THE VEHICLE BATTERY

Special tools are required to refit the battery after removal, therefore battery removal and refit should be carried out only by qualified personnel. Consult your Retailer.

### CHARGING OR REPLACING THE VEHICLE BATTERY

If the vehicle battery should require charging, the battery must be removed from the vehicle. Consult your Retailer.

#### CAUTION

**Battery disconnection, removal and replacement should be carried out only by qualified personnel. Consult your Retailer.**



Used batteries must be disposed of correctly as they contain a number of harmful substances. Seek advice on disposal from your Retailer and/or your local authority.

### EFFECTS OF BATTERY DISCONNECTION

Disconnecting the battery can affect a number of vehicle systems, especially if there is insufficient battery power prior to disconnection. For example, the alarm may trigger depending on its state when the battery was disconnected. If the alarm does sound, use the Smart Key in the normal way to disarm the security system. The windows may need recalibrating to operate correctly.