

ENGINE COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse color	Circuits protected
1	-	-	Not used
2	-	-	Not used
3	80	-	Cooling fans
4	-	-	Not used
5	80	-	Electric power assisted steering
6	15	blue	Oxygen sensors
7	5	tan	Engine management, A/C clutch
8	20	yellow	Engine management control unit
9	10	red	DMTL (fuel tank leak detection)
10	20	yellow	Automatic transmission
11	10	red	Engine sensors
12	15	blue	Ignition coils
13	10	red	A/C clutch
14	-	-	Not used
15	40	green	Starter motor
16	100	-	PTC heater
17	60	-	Passenger compartment fuse box
18	60	-	Passenger compartment fuse box
19	60	-	Luggage compartment fuse box
20	60	-	Luggage compartment fuse box
21	-	-	Not used
22	30	pink	Front wipers
23	40	green	Passenger compartment fuse box
24	-	-	Not used
25	30	pink	Anti lock braking system
26	40	green	Anti lock braking system
27	40	green	Passenger compartment fuse box
28	40	green	Heater blower
29	30	pink	Electric trailer brake
30	15	blue	Headlamp washer
31	15	blue	Horns

Fuse number	Rating (Amps)	Fuse color	Circuits protected
32	-	-	Not used
33	5	tan	Relay coils - Horn, Heated windshield, Fuel pump
34	40	green	LH Heated windshield
35	40	green	RH Heated windshield
36	-	-	Not used
37	20	yellow	Fuel pump
38	-	-	Not used
39	-	-	Not used
40	5	tan	AFS (RH) headlamp
41	5	tan	AFS (LH) headlamp
42	5	tan	Headlamp control, Dynamic headlamp leveling control unit
43	5	tan	High beam assist, rear camera,
44	10	red	Heated steering wheel
45	-	-	Not used