

- Position the seat belt so that it is mid-way between your neck and your shoulder. Fit the strap tightly across your hips, not across your stomach.
- Ensure that your driving position is comfortable and enables you to maintain full control of the vehicle.

## **⚠ WARNING**

**Do not sit or lean unnecessarily close to the air bag. An inflating air bag can cause serious injury or even death. Always fasten your seat belt properly and position the seat so that you can sit as far back as possible from the air bag and still comfortably reach all controls.**


## **DRIVING POSITION MEMORY**

### **⚠ WARNING**

**Before activating the seat memory, ensure that the area immediately surrounding the seat is clear of obstructions and that all occupants are clear of moving parts.**

Front seat positions can be saved to vehicle memory.

Once you have adjusted the seat position and, if required, the exterior mirrors, the vehicle can memorize the settings for future use. See **58**, **EXTERIOR MIRRORS**.

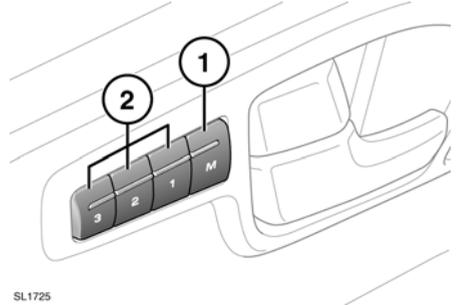

1. On the driver's door, press the memory store button to activate the memory function. The switch indicator will illuminate.
2. Press one of the preset buttons within five seconds to memorize the current settings. **Memory (1, 2 or 3) Settings Saved** will be displayed on the message center, accompanied by an audible chime to confirm the settings have been saved to memory.

**Note:** *A seat position will be saved to memory only during the five second active period.*

**Note:** *Any existing settings will be over-written when a new position is saved to memory.*

To recall a saved position, press the relevant preset button (**2**). **Memory (1, 2 or 3) Recalled** will be displayed in the message center.

### **Coupe passenger seat**

Saving a seat position to memory follows the same procedure as for the driver's seat. Press the memory button to store the current seat settings.