

6. Seek up: Select to view the next DVD chapter or previous chapter of the video media
7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/restart play.
9. Seek down: Select to view the previous DVD chapter or previous chapter of the video media.

For information on the CD/DVD loading slot and the eject button, and the use of the audio/video controls on the audio unit and steering wheel, see **114, TOUCH SCREEN AUDIO/VIDEO CONTROLS**.

DivX VIDEO ON DEMAND

DivX content is encrypted to ensure copyright protection. The content will play only on registered playback devices. See DivX information **116, LICENSING**.

When the registration process is complete, a DVD with DivX VOD content can be played.

After the first playing of DivX VOD content, a new registration code will be displayed. Do NOT use this code when purchasing DivX VOD content. Use only the original registration code.

If a DVD with DivX VOD content has a different registration code to your unique code, it will not be possible to play it. **Authorization Error** will be displayed on screen.

FULL SCREEN VIEW CONTROLS

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Display format: Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option.

MY VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The touch screen will display the **My video** screen and the relevant safety message will be displayed.