

Seat belts

BELTMINDER

A front and rear seat Beltminder system warns the driver when the seat belt of an occupied seat is not fastened or is unfastened during a trip.



A graphic displayed in the message center indicates which seat belts are fastened at the start of a trip and also when a seat belt is fastened or unfastened during a trip.

Each seating position is represented by a passenger icon, the color of which indicates the seat belt status:

- Green - seat belt in the indicated position is fastened.
- Red - seat belt in the indicated position has been unfastened while the vehicle ignition is on. This indicator will turn gray after 30 seconds.
- Gray - seat belt not fastened.

Note: The indicators will be displayed for 30 seconds each time there is a status change, e.g., a seat belt is unfastened or fastened or a door is opened and then closed.

In addition, an audible warning will sound under the following conditions:

- The seat belt of an occupied front seat is not fastened or is unfastened during a trip.
- A rear seat belt is unfastened.

Note: If a heavy object is placed on the front passenger seat, it may activate the Beltminder feature. It is recommended that any objects placed on the front passenger seat are secured using the seat belt.

Note: Although not advisable, it is possible to disable the Beltminder function. Please see your Retailer to disable or re-instate the function.