Stability control

SWITCHING DSC ON

DSC is re-enabled by one of the following:

- Press and briefly hold the DSC OFF switch.
- Stop and restart the engine.
- Select a new Terrain Response special program.