

## DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off. A chime will also sound and the message **DSC OFF** is displayed in the message center.

If Trac DSC is selected, the warning lamp will also illuminate and the message **TRAC DSC** is displayed for 4 seconds.

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while

driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application.

Seek qualified assistance urgently.

## AIR BAG (AMBER)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp illuminates while driving, there is a fault with the air bag system.

Seek qualified assistance as soon as possible.

## ADAPTIVE FRONT LIGHTING (AMBER)



Illuminates when there is a fault. The headlamps will still operate, but without this feature operating

correctly.

Seek qualified assistance as soon as possible.

## REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

## EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

## TIRE PRESSURE MONITORING (YELLOW)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while

driving, one or more tires are significantly under-inflated. Stop the vehicle as soon as possible, check the tire pressures and inflate to the recommended pressure.

## CRUISE CONTROL (GREEN)



Illuminates when cruise control is active.

## HILL DESCENT CONTROL (GREEN)



Illuminates when HDC is selected and HDC operating conditions are met. If the lamp flashes, HDC has

been selected, but the operating conditions are not being met (e.g. vehicle speed is too high) or HDC fade-out is occurring.

## SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

## FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

## TURN SIGNALS (GREEN)



The appropriate warning lamp will flash when the turn signals are operated.