

- **Preferences:** Select to alter the following settings:
  - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **2**, it is necessary to complete a training program first.  
To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
  - **Voice feedback:** Select **On** or **Off**.
  - **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training program, designed to enable the system to better recognize the vocal characteristics of a user.  
Select **User 1** or **User 2** and follow the on screen and audible instructions. See **139, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **138, USING VOICE CONTROL**.

## VALET

### Selection:

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the luggage compartment. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

From the **Home menu**, select **Valet**:

Enter a memorable four digit Personal identification Number (PIN). On completion, touch the **OK** soft key.

If you wish to cancel the PIN, select **Delete**.

If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.

**Valet mode activated** is displayed to indicate that the PIN has been accepted.

The luggage compartment is now securely locked in Valet mode and the Valet mode On screen is displayed.

### Deselection:

When you re-enter the vehicle, touch the Valet button to view the Valet mode screen.

Enter your four digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that your PIN has been accepted.

- The luggage compartment will return to the previously set security requirement.
- The touch screen will be enabled.

***Note:** If the PIN is forgotten, Valet mode can only be deactivated by your Retailer.*

## EXTRA FEATURES

There are more features available than can be displayed at one time. This menu allows the selected features to be displayed, for example:

- **Ambient lighting:** While the headlamps are turned on, select this feature to turn ambient lighting on or off. Adjust the lighting level to suit. Adjusting to the minimum level will turn ambient lighting off. Selecting Auto allows the vehicle to control when and how ambient lighting is used.

Extra features are displayed in alphabetical order. Use the forward or back soft keys to move to the next screen.