


### TOUCH SCREEN REMOTE CONTROL

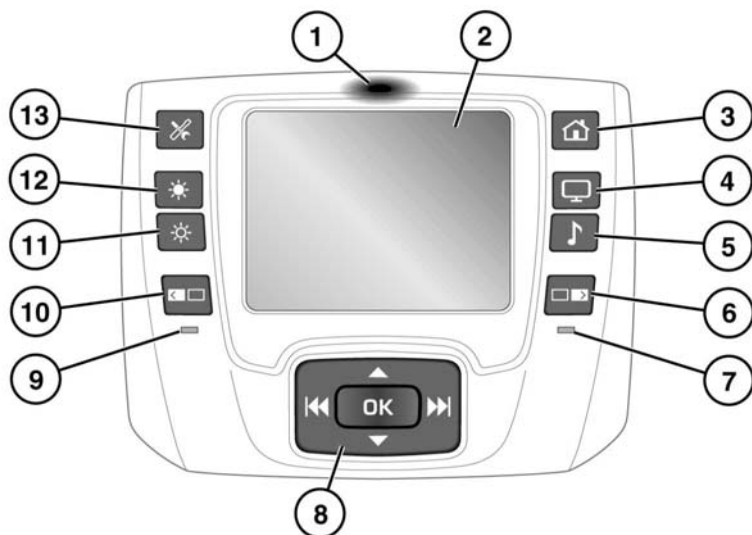

E141080

**Note:** The rear media remote control communicates via infra-red and must be pointed towards the receiver in the rear screen.

1. Press here to undock remote control.

#### **NOTICE**

*Do not press the touch screen to undock the remote control.*

2. Touch screen.

3. Home screen.

4. Video source select.

5. Audio source select.

6. Right screen select.

7. Right screen tell-tale. (illuminates when right screen has been selected).

8. Cursor movement and option select buttons.

9. Left screen tell-tale. (illuminates when left screen has been selected).

10. Left screen select.

11. Screen brightness - decrease.

12. Screen brightness - increase.

13. RSE settings.

### USING THE SYSTEM

The system is operated using the remote control.

To release the remote from the docked position, press at the top of the remote (1) to unlatch it.

#### **NOTICE**

*Do not attempt to pull the remote control out of its docked position.*