


## TOUCH SCREEN REMOTE CONTROL

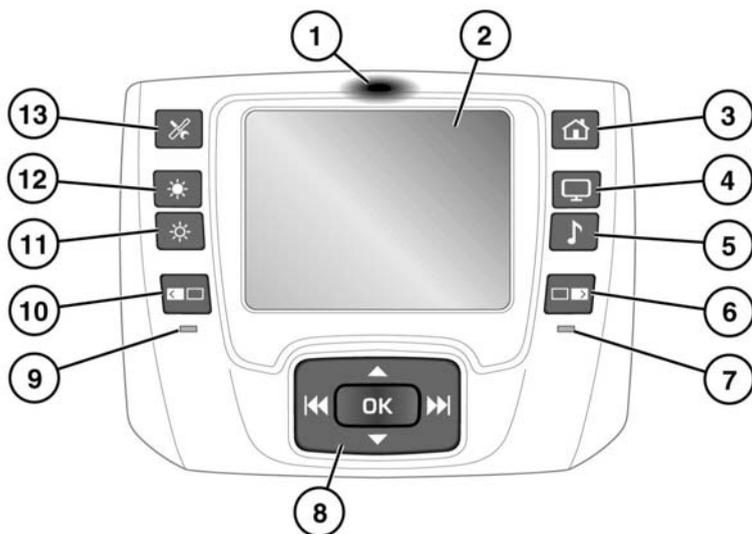

E141080

**Note:** The rear media remote control communicates via infra-red and must be pointed towards the receiver in the rear screen.

1. Press here to undock remote control.

### **NOTICE**

Do not press the touch screen to undock the remote control.

2. Touch screen.
3. Home screen.
4. Video source select.
5. Audio source select.
6. Right screen select.
7. Right screen tell-tale. (illuminates when right screen has been selected).
8. Cursor movement and option select buttons.
9. Left screen tell-tale. (illuminates when left screen has been selected).

10. Left screen select.

11. Screen brightness - decrease.

12. Screen brightness - increase.

13. RSE settings.

## USING THE SYSTEM

The system is operated using the remote control.

To release the remote from the docked position, press at the top of the remote (1) to unlatch it.

### **NOTICE**

Do not attempt to pull the remote control out of its docked position.