

## Entering the vehicle

7. Remove the emergency key blade and unfold.
8. If the Smart Key fails to open the vehicle, insert the key blade into the slot at the base of the door lock cover and gently lever the key blade upwards. Carefully twist the key blade, to lever the cover off the retaining clips. Insert the key blade into the exposed lock and turn to operate the lock. The alarm will sound.

**Note:** When replacing the door lock cover, locate the top retaining clips before pushing the cover into position.

**Note:** When the left hand front door is unlocked using the key blade, the alarm will sound until the Smart Key is positioned correctly.

**Note:** A replacement Smart Key can be obtained only from your Land Rover Retailer. The Retailer will require proof of identification and ownership.

Notify your Retailer immediately if a Smart Key is lost or stolen.

9. Keyless entry/exit:
  - Exterior door handles have separate unlock and lock sensors. The unlock sensor is located on the inner surface of the handle.

### SINGLE-POINT/MULTI-POINT ENTRY

When you press the unlock button, your vehicle will unlock in one of two ways:

1. Single Point Entry: Unlocks the driver's door only. A second press is required to unlock the remaining doors and the tailgate.
2. Multi-Point Entry: Unlocks all doors and the tailgate on the first press.

To change from Single to Multi-Point entry (or vice versa), with the vehicle unlocked, press both the lock and unlock buttons simultaneously for three seconds. The hazard warning lamps will flash twice to confirm the change.

This feature may also be set via the settings menu. See **66, VEHICLE INFORMATION AND SETTINGS MENU**.

**Note:** If, when the vehicle is unlocked, an audible warning is emitted, this will be a 'Mislock' error. There may be a fault with either of the alarm sensors. Consult with your Retailer as soon as possible.

### GLOBAL OPENING

Press and hold the Smart Key unlock button for 3 seconds to unlock the vehicle and open all windows.

Press any button on the Smart Key to cancel the operation.

### KEYLESS ENTRY

Keyless entry allows the vehicle to be opened if a Smart Key is within 3ft (1.0m) of the door handle or the tailgate external switch.

#### **NOTICE**

*The Smart Key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including in a laptop bag), games console etc. Keep the Smart Key clear of such devices when attempting Keyless entry or Keyless starting.*

**Note:** The Smart Key needs only to be on the driver's person or in a non-metallic bag or briefcase. It does not need to be exposed or handled.