


Exiting the vehicle

DOOR LOCKS AND RELEASE LEVERS

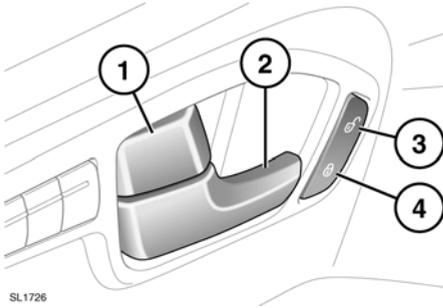

1. Press a locking lever to lock a door. Pull the lever back to unlock. Operating either front door locking levers will lock or unlock all doors.
2. Pull a release lever to open a front door.
To unlock and open a rear door, first operate the lock lever, then pull the release lever.
3. Press the master unlock button to unlock all doors and tailgate.
4. With all doors closed, press the master lock button to lock all doors and tailgate.

Note: If the vehicle was locked with the Smart Key, operating an interior door release lever will unlock only that door. If the door is opened the alarm will sound.