

EASY ENTRY/EXIT

When Easy entry/exit is enabled, the driver's seat will automatically lower when the ignition is switched off and the door is opened. Upon returning to the vehicle, when the driver's door is closed and the ignition is turned on, the seat will return to its previously set position.

See **66, VEHICLE INFORMATION AND SETTINGS MENU.**