

**NOTICE**

*Always run the engine during prolonged use of the rear media system, otherwise, the vehicle battery may become discharged.*

**NOTICE**

*Children should be supervised at all times and view/listen to only media suitable for their age group.*

**Note:** *When a new video source is selected, the audio source will always be synchronised. However, if an alternative audio source is subsequently selected, synchronisation can be achieved again with a long touch of the relevant **Audio** soft key.*

## CONNECTING A VIDEO DEVICE

Inputs are provided for AV and USB 2.0 video media. See **129, CONNECTING A DEVICE**.

Video files must be recorded in the correct format. See DivX information **116, LICENSING**.

## REAR MEDIA SETTINGS

The rear media settings screen allows **Limousine Mode** to be turned on or off.

When **Limousine Mode** is selected, the rear passengers can control the total cabin audio system via the remote control.

## REAR MEDIA CONTROL FROM THE TOUCH SCREEN

To switch on a rear screen:

From the front touch screen, select **Left, Right** or both, as required.

### Selecting an audio source:

**Listen (9)** will display a choice of audio sources: **Radio, SAT Radio, CD, Stored CD, iPod, USB** and **AUX**.

**Note:** *When watching a video source, an alternative audio source can be selected.*

### Selecting a video source:

**Watch (10)** will display a choice of video sources: **DVD, USB** and **AV1**.