

NOTICE

Always run the engine during prolonged use of the rear media system, otherwise, the vehicle battery may become discharged.

NOTICE

Children should be supervised at all times and view/listen to only media suitable for their age group.

Note: When a new video source is selected, the audio source will always be synchronised. However, if an alternative audio source is subsequently selected, synchronisation can be achieved again with a long touch of the relevant **Audio** soft key.

CONNECTING A VIDEO DEVICE

Inputs are provided for AV and USB 2.0 video media. See **129, CONNECTING A DEVICE**. Video files must be recorded in the correct format. See DivX information **116, LICENSING**.

REAR MEDIA SETTINGS

The rear media settings screen allows **Limousine Mode** to be turned on or off.

When **Limousine Mode** is selected, the rear passengers can control the total cabin audio system via the remote control.

REAR MEDIA CONTROL FROM THE TOUCH SCREEN

To switch on a rear screen:

From the front touch screen, select **Left, Right** or both, as required.

Selecting an audio source:

Listen (9) will display a choice of audio sources: **Radio, SAT Radio, CD, Stored CD, iPod, USB** and **AUX**.

Note: When watching a video source, an alternative audio source can be selected.

Selecting a video source:

Watch (10) will display a choice of video sources: **DVD, USB** and **AV1**.