


HEADLAMP REMOVAL

Moving the left headlamp unit to access bulbs;

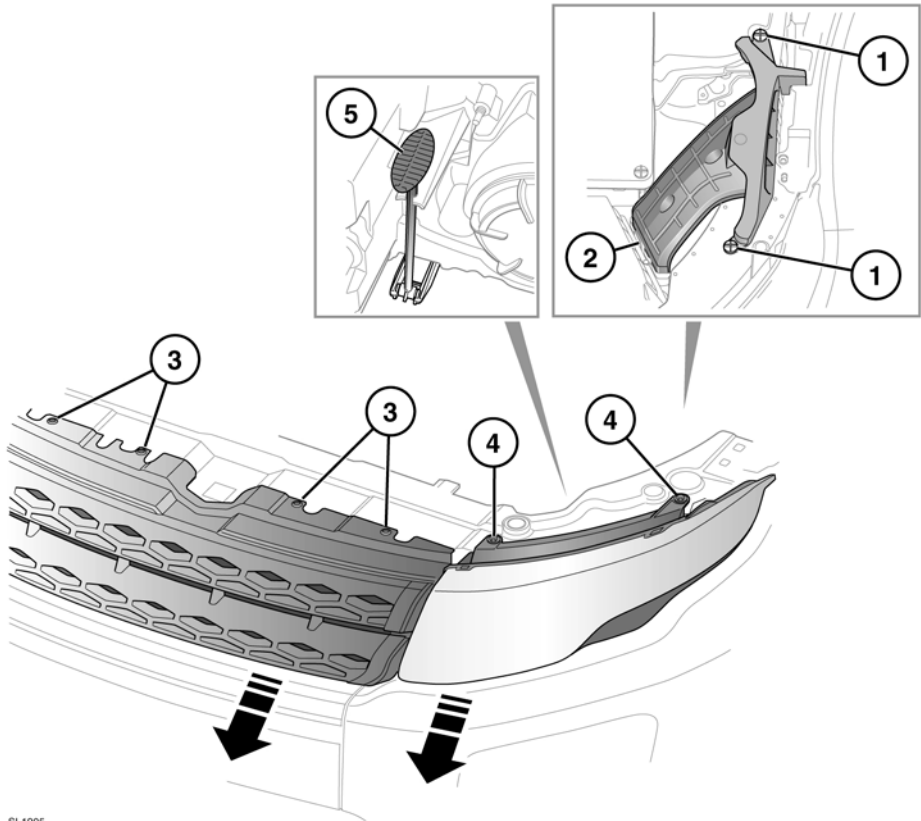


SL1905

1. Remove the 2 plastic fixings.
2. Pull the tube up to release from the air box. This will allow more room for maneuverability.
3. Remove the 4 grille fixings.
4. Remove the 2 retaining bolts.
5. At the rear of the headlamp unit, pull up on the T grip release mechanism and hold while sliding the headlamp unit forward 1.6in (40mm).

Maintenance

Moving the right headlamp unit to access bulbs;

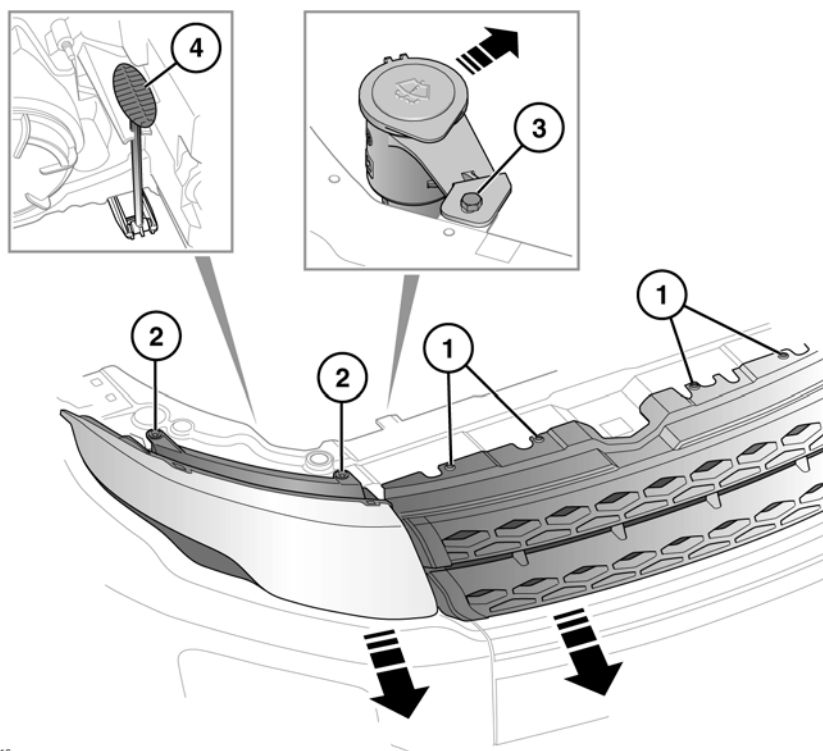

SL1916

1. Remove the 4 grille fixings.
2. Remove the 2 retaining bolts.
3. Remove the fixing then move the filler tube rearwards. This will allow more room for access to the bulb holders.
4. At the rear of the headlamp unit, pull up on the T grip release mechanism and hold while sliding the headlamp unit forward 1.6in (40mm).