



Canada only. This red parking brake warning lamp will illuminate continuously while the ignition is on and for ten seconds after the ignition is turned off.

It is important to confirm that the lamp is continuously illuminated (not flashing), as this indicates the brake has been correctly applied.

If the lever is operated while the vehicle is still moving and speed is less than 2mph (3km/h) the vehicle will be brought to an abrupt stop. The stop lamps will not be illuminated.

If a fault is detected the warning lamp will flash and a **PARKBRAKE** message will be displayed in the message center.

2. To release the parking brake, with the ignition on, press the brake pedal then press down on the EPB lever. The parking brake warning lamp will extinguish.

### **NOTICE**

*Driving the vehicle with the parking brake applied, or repeated use of the parking brake to slow the vehicle, may cause serious damage to the brake system.*

In an emergency, with the vehicle traveling more than 2 mph (3 km/h), pulling on the EPB lever and holding gives a gradual reduction in speed. The brake warning indicator will illuminate accompanied by a warning tone and a **PARKBRAKE** message appearing in the message center. The stop lamps will illuminate. Emergency operation will cease if the EPB lever is released or pressed down.

## **EPB AUTOMATIC USE**

### **Applying EPB**

EPB will be applied automatically when **P** is selected.

In the event of a failure, a **PARKBRAKE** message will be displayed in the message center.

### **Releasing EPB**

If the vehicle is stationary with the engine running while the transmission is in **D** or **R** and the EPB is then applied, pressing the accelerator will release the EPB automatically and allow the vehicle to move off.

The parking brake is also automatically released when the rotary selector is moved from the **P** position.

To effect an automatic release, the foot brake must be applied and also the driver's door must be closed or the driver's seat belt must be buckled.

To delay an automatic release, hold the EPB lever in the applied position and release at the desired point. The parking brake system gradually reduces the system load to assist a smooth drive away.

At the start of a trip, EPB release times may be extended when changing from **P** or **N**. This is to allow for increased gear engagement times.

## **EPB WARNING INDICATORS**

If the system detects a fault with the EPB, the amber brake warning indicator will illuminate accompanied by a message in the message center.

If the system detects a fault while EPB is operating, the red brake warning indicator will flash and a **PARKBRAKE FAULT** message will display in the message center.

**Note:** *The red brake warning indicator will continue to be illuminated for at least ten seconds after the ignition has been turned off.*