


DVD/VIDEO MEDIA CONTROLS

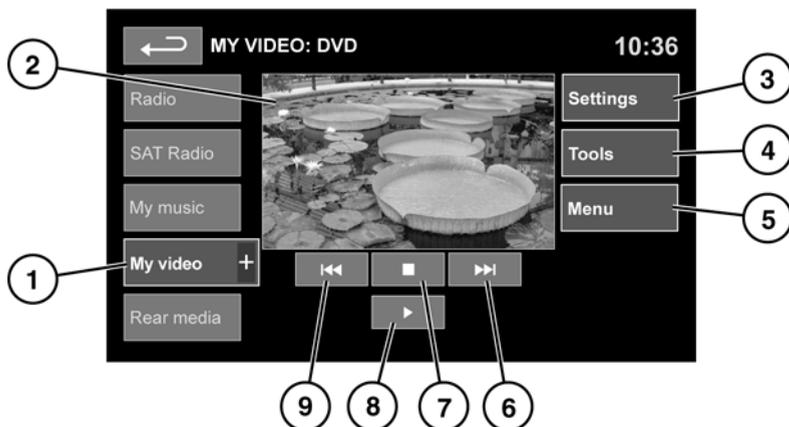

SL1974

See **109, TOUCH SCREEN HOME MENU.**

⚠ WARNING

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

1. My video

- Touch the + icon to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.

Note: After 5 seconds without use, the My video menu will close.

2. Preview screen for video media information: Touch to select full screen mode.

Briefly touch the screen again to view the controls at any time.

To return to preview mode, touch and hold the full screen view.

3. Settings. Depending on the video media specification, there are 2 sub-menus within settings: **Options** and **VOD** (Video On Demand).

VOD allows playing of DivX VOD content from video media. The eight digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See DivX information **116, LICENSING.**

4. Tools. The following options can be selected:

- **GOTO.**
The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number.**
- **Subtitles.**
- **Angle.**
- **Audio.**

5. Menu. Select to view the video media menu. On some screens this may be replaced by a **Browse** soft key.