

## FRONT AIR BAGS

The front passenger and driver air bags are able to deploy in two stages, depending on the severity of the frontal impact. In a severe impact, the air bags inflate fully to offer maximum protection. In a lesser impact, full deployment is not required, so the air bags are partially inflated.

## SEAT MOUNTED SIDE AIR BAGS

These are designed to protect the thorax region of the torso and will deploy only in the event of a side impact and then, only on the side of the impact.

## CURTAIN AIR BAGS

The curtain air bags are deployed in side impact and rollover events, providing greater protection from serious head injuries.

### WARNING

**For the curtain air bags to deploy correctly, the roof lining and A post trim must be undamaged and fitted correctly. Any damage or suspect fitting should be referred to a Land Rover Retailer/Authorized Repairer for examination.**

**Note:** *Curtain air bags will not inflate as a result of frontal or rear impacts alone.*

## AIR BAG DEPLOYMENT EFFECTS

### WARNING

**When an air bag inflates, a fine powder is released. This is normal and not an indication of a malfunction. The powder may cause irritation to the skin and should be thoroughly flushed from eyes and any cuts or abrasions. This powder can cause breathing difficulties for asthma sufferers or other people with respiratory problems. If this occurs, get out of the vehicle as soon as it is safe to do so or get fresh air by opening a window. If breathing problems persist, seek medical attention.**

### WARNING

**Air bag deployment is accompanied by a very loud noise which may cause discomfort and temporary loss of hearing.**

### WARNING

**After inflation, some air bag components will be very hot. Do not touch the air bag components until they have cooled sufficiently.**

After inflation, the front and seat mounted side air bags deflate immediately. This provides a gradual cushioning effect for the occupants and also ensures that the driver's forward vision is not obscured.

## AIR BAG WARNING LAMP



The air bag warning lamp is displayed in the instrument panel and will illuminate as a bulb check when the ignition is turned on.