


## TOUCH SCREEN AUDIO/VIDEO CONTROLS

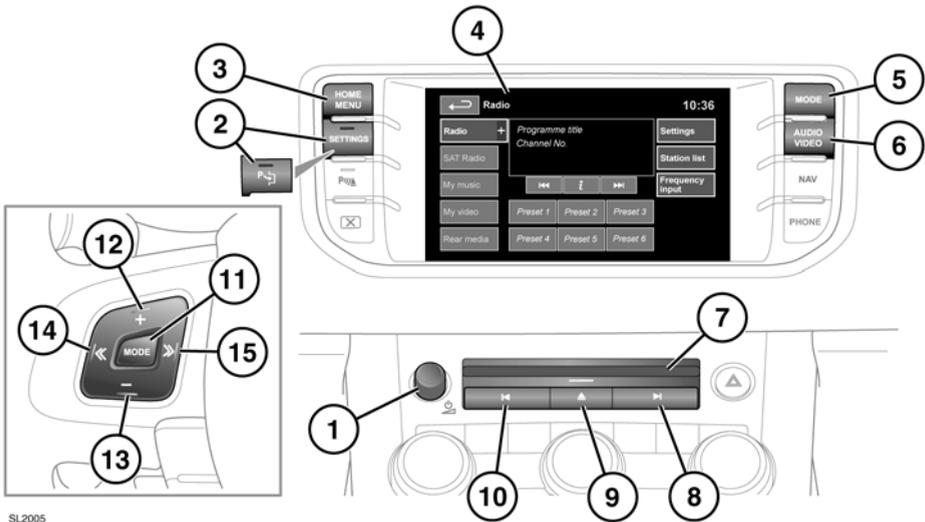

SL2005

### **⚠ WARNING**

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

### **⚠ WARNING**

Sustained exposure to high sound levels can damage your hearing.

1. Press to switch the audio system on/off.

**Note:** The audio system will operate with the ignition on or off, but will always switch off when the ignition is switched off. Switch the audio on again if required.

Rotate to adjust volume level.

**Note:** If volume is turned to zero while a CD is playing, the CD will pause play. Play will resume when a greater volume is selected.

2. **SETTINGS.** Press for direct access to the settings menu. When Park assist is specified, the icon is changed and the button will turn Park assist on and off. The Settings menu is then accessed via the touch screen.
3. **HOME MENU.** Press for direct access to the Home menu.
4. Touch screen.
5. **MODE.** Press repeatedly to scroll through all audio/video sources.
6. **AUDIO VIDEO.** Press for direct access to the Audio/Video menu.

**Audio/Video** options can include Radio, HD radio, SDARS, My music, My video and Rear media.

My music consists of CD, Stored CD, MP3, USB, iPod® and AUX.

My video includes CD/DVD, USB and iPod®.

## 7. CD/DVD loading slot.

The player will accommodate one disc at a time. With the Stored CD player up to 10 CDs can be uploaded individually to the Stored CD store.

Only discs with CDDA tracks and no other type, can be uploaded to the Stored CD store.

Insert a disc into the loading slot until resistance is felt. The player mechanism will complete the loading.

## 8. Seek up:

- Short press:
  - to auto seek up the frequency to the next radio station,
  - to select the next track on chosen audio source - CD, MP3 etc or
  - to select the next DVD chapter.
- Long press:
  - to activate radio manual seek mode or,
  - to scan forwards through the current audio source track.

With radio manual seek mode activated, further short presses will change the frequency in single increments. A further long press will scan forwards through the current waveband until the button is released.

## 9. CD/DVD eject button.

## 10. Seek down:

- Short press:
  - to auto seek down the frequency to the next radio station,
  - to select the previous track or start of current track on chosen audio source - CD, MP3 etc or,
  - to select the previous DVD chapter.

- Long press:

- to activate radio manual seek mode or,
- to skip backward through current audio source track.

With radio manual seek mode activated, further short presses will change the frequency in single decrements. A further long press will scan backward through the current waveband until the button is released.

## 11. **MODE:** Press repeatedly to scroll through all audio/video sources.

## 12. Press to increase volume.

## 13. Press to decrease volume.

## 14. Seek down:

- Short press:
  - to select the previous radio preset or,
  - to select the previous track or start of current track on chosen audio source - CD, MP3 etc.
- Long press:
  - to auto seek down the frequency to the next radio station.

## 15. Seek up:

- Short press:
  - to select the next radio preset or,
  - to select the next track on chosen audio source - CD, MP3 etc.
- Long press:
  - to auto seek up the frequency to the next radio station.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.