

## LABEL LOCATIONS




Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilizes very high voltages. Do not touch any ignition components while the starter switch is turned on.

Additional information labels may also be found at the following locations:

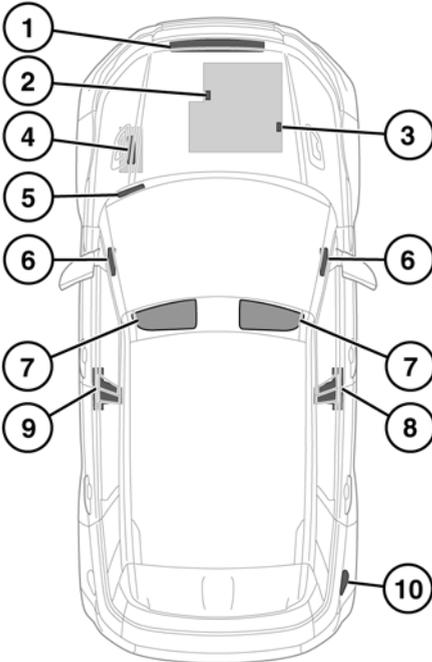

SL1903

1. Hood locking platform - Air conditioning label.

2. Engine identification information. Stamped into engine mounting flange.
3. Engine information label. Top right side of engine cover.
4. Top of battery - Battery warning symbols.
5. The VIN (Vehicle Identification Number) is stamped on a plate which is visible through the lowest part of the left side of the windshield.

**Note:** If you need to communicate with a Retailer, you may be asked to quote the VIN number.

6. End of facia (passenger side) - Passenger air bag label.
7. Sun visor - Air bag label, vehicle handling label.
8. Base of right-hand B pillar - Tire pressure label, Air bag warning label.
9. Left-hand B pillar - VIN plate.
10. Inside gas filler flap - Fuel specification label.

It is important that you are familiar with these subjects to ensure that your vehicle and its features are used safely.