

## HEATED SCREENS

Press to operate the required screen heater. The screen heater(s) will operate for a predetermined timed period before automatically switching off.

### **NOTICE**

*Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.*

## HEATED SEATS

Press the relevant button to operate the required seat heater at high level. Three indicators will illuminate.

Press a second time to heat the seat at a medium level. Two indicators will illuminate.

Press a third time to heat the seat at the lowest level. One indicator will illuminate.

Press a fourth time to switch off.

**Note:** *Seat heaters consume a great amount of battery power. They will operate only when the engine is running.*

## RECIRCULATION

- Press briefly to activate timed recirculation. The button indicator illuminates when recirculation is on.
- Press and hold the button to activate latched (continuous) recirculation. The button indicator will flash and then illuminate constantly.
- To cancel recirculation, press the button briefly.

**Note:** *Prolonged use at low temperatures may cause the windows to fog.*

### **With pollution and humidity sensing;**

- Press the AUTO button briefly to activate timed recirculation. The AUTO LED will illuminate. The system automatically selects fresh and recirculated air dependent on pollution and cabin humidity.
- Press and hold the AUTO button to activate latched recirculation. The AUTO LED will flash and then illuminate constantly.
- Press the MAN button briefly. The MAN LED will illuminate. Recirculation mode is selected permanently.
- To cancel recirculation, press the button briefly.

## WATER DEPOSITS

The climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and is no cause for concern.