

2. With the parking brake applied, switch on the ignition.
3. Ensure the transmission is in the **N** position.
4. The ignition must remain on to allow operation of turn signals, brake lamps etc, and to ensure that the automatic return to **P** after 10 minutes does not occur.
5. Release the parking brake before towing the vehicle.

NOTICE

Leaving the ignition switched on for extended periods will drain the vehicle battery.

AFTER TOWING ON FOUR WHEELS

1. Apply the parking brake.
2. Move the transmission to the **P** position.
3. Switch off the ignition and remove the Smart Key from the vehicle.
4. Remove the towing attachment and refit the cover to the front towing point.

⚠ WARNING

Use extreme caution when detaching towing equipment. Vehicle movement is possible which can result in serious injury.