


## USING CRUISE CONTROL

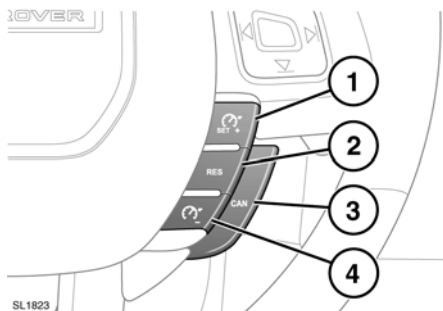

1. Set target speed, or increase speed.
2. **RES.** Resume set speed.
3. **CAN.** Suspends cruise control operation without erasing memorized speed.
4. Decrease set speed.

**Note:** Cruise control is not available when using Hill Descent Control or when Terrain Response Mud-Ruts or Sand programs are selected.

**Note:** Do not use cruise control when driving off-road.

## SETTING THE CRUISE SPEED

### WARNING

The driver must always ensure that a safe speed is maintained within the speed limit, taking account of traffic and road conditions. Do not use cruise control in heavy traffic or conditions where a constant road speed cannot be safely maintained, such as on roads that are winding, wet with rain or snow, slippery or unpaved.

**Note:** When setting the cruise control to the speed limit, it is important to remember that it is possible for the vehicle speed to increase when traveling downhill. This may result in the vehicle speed exceeding the speed limit.

**Note:** Cruise control can be engaged only at speeds in excess of 18 mph (30 km/h).

Accelerate until the desired speed is reached, then press control (1). This sets the vehicle speed into the system's memory. Cruise control will now maintain that speed.



The cruise control warning lamp will illuminate to confirm cruise control is operational.

Speed can still be increased using the accelerator pedal. As soon as the accelerator pedal is released, the vehicle speed will return to the set cruising speed.

**Note:** If the accelerator pedal is pressed for more than 60 seconds, cruise control will be cancelled.

To increase the set cruise speed, press and hold control (1). Release the switch when the desired speed is reached, the new speed will be set and maintained.

The speed can be increased in steps of 1 mph (2 km/h), by briefly pressing control (1).

Speed can also be increased using the accelerator. When the desired speed is reached press control (1) to set and maintain the new speed.

**Note:** The set speed can be erased only by switching off the ignition.

## CHANGING THE CRUISE SPEED

To reduce cruising speed, press and hold control (4). Release the switch when the desired speed is reached, the new speed will be set and maintained.