
RADIO CONTROLS

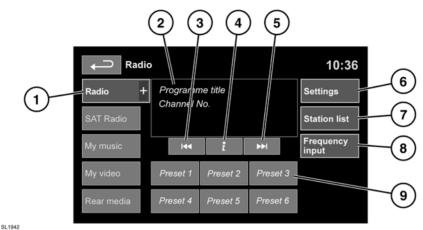

See 109, TOUCH SCREEN HOME MENU.

AWARNING

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing injury or death.

- Radio: Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.
 - The waveband selection box will close automatically after 5 seconds without use.
- 2. Displays information about the current station. Some of this information is also displayed in the instrument panel.
- 3. Seek down:
 - Short touch to auto seek down the frequency to the next radio station.

- Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.
- **4.** Information. More information from the broadcasting station.
- 5. Seek up:
 - Short touch to auto seek up the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
- Settings: Touch to view and activate/ deactivate the following features: RBDS, and HD Radio. See 120, RADIO BROADCAST DATA SYSTEM (RBDS).