


MAIN MENU

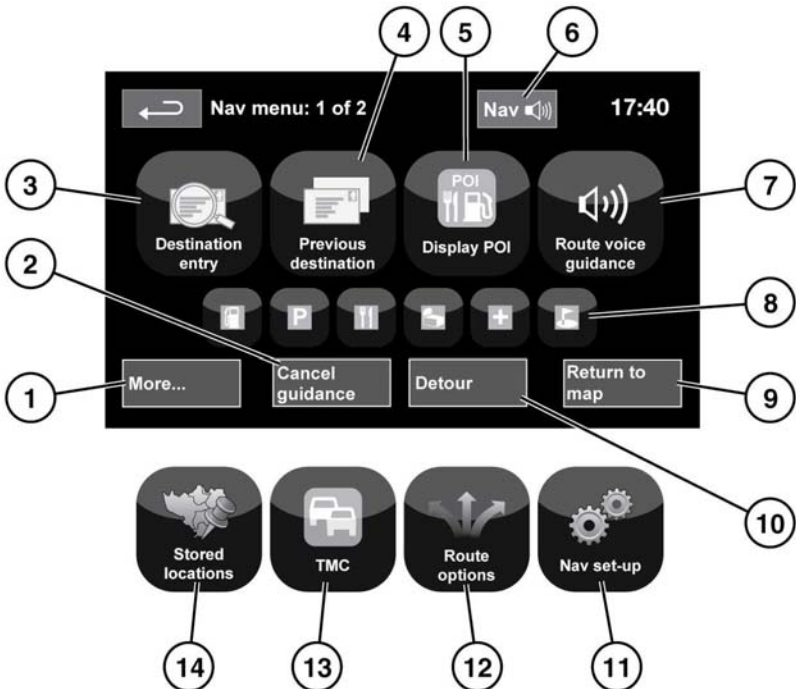

E141771

⚠ WARNING

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

1. **More...:** Displays the other Nav menu screen.
2. **Cancel guidance:** Cancels current route guidance.
3. **Destination entry:** Provides a choice of options for entering a destination.
4. **Previous destination:** Displays previous destinations entered.
5. **Display/Hide POI:** Turns the POI (Point Of Interest) icons on the map on/off.
6. When a destination is set, the Range Rover logo is replaced by a soft key which enables the last voice instruction to be repeated.
7. **Route voice guidance:** Allows the voice guidance messages to be turned off for the current trip. The soft key is highlighted while voice guidance is enabled.
8. **Quick POI shortcuts:** This provides the option to quickly enter a destination of a local POI. The categories can be changed in the Navigation setup menu.
9. **Return to map:** Advances to the main map screen.
10. **Return to map:** Advances to the main map screen.
11. **Nav set-up:** Advances to the Navigation setup menu.
12. **Route options:** Displays route options.
13. **TMC:** Displays Traffic Message Channel information.
14. **Stored locations:** Displays stored locations.