

13. **PHONE.** Press for direct access to the **Telephone** menu.
14. Touch to select the **Off road Navigation** menu. Current set destination is displayed.
15. Touch to select **Phone**.
16. **Extra features.** Touch to display list.
17. Shortcut keys. Use for personal shortcuts to any part of the system. Shortcuts can be made in the **Set-up** menu.

## TOUCH SCREEN USE

### **WARNING**

**Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing injury or death.**

### **NOTICE**

*Always run the engine during prolonged use of the touch screen. Prolonged use will cause the battery to discharge.*

### **NOTICE**

*Do not use excessive pressure when selecting items on the touch screen.*

### **NOTICE**

*Avoid spilling or splashing liquids onto the touch screen.*

### **Switching on**

- Switch on the ignition.
- Switch on the touch screen.  
The most recently used audio source controls will be displayed (e.g. Radio, CD etc.).
- Select **HOME MENU**.
- Select a source.

**Note:** *Available sources will depend upon options selected at time of purchase.*

## TOUCH SCREEN DISPLAY ICONS

Some touch screen display icons are displayed on subsequent screens and may not all be displayed at the same time, e.g.



Back soft key: Touch to return to the previous screen displayed.