

13. **PHONE.** Press for direct access to the **Telephone** menu.
14. Touch to select the **Off road Navigation** menu. Current set destination is displayed.
15. Touch to select **Phone**.
16. **Extra features.** Touch to display list.
17. **Shortcut keys.** Use for personal shortcuts to any part of the system. Shortcuts can be made in the **Set-up** menu.

TOUCH SCREEN USE

WARNING

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing injury or death.

NOTICE

Always run the engine during prolonged use of the touch screen. Prolonged use will cause the battery to discharge.

NOTICE

Do not use excessive pressure when selecting items on the touch screen.

NOTICE

Avoid spilling or splashing liquids onto the touch screen.

Switching on

- Switch on the ignition.
- Switch on the touch screen.
The most recently used audio source controls will be displayed (e.g. Radio, CD etc.).
- Select **HOME MENU**.
- Select a source.

Note: *Available sources will depend upon options selected at time of purchase.*

TOUCH SCREEN DISPLAY ICONS

Some touch screen display icons are displayed on subsequent screens and may not all be displayed at the same time, e.g.



Back soft key: Touch to return to the previous screen displayed.