

*Park assist can be reactivated by pressing the Park assist button. The parking maneuver will be resumed.*

7. If further maneuvering is required in the parking space, select forward / reverse gear and continue to follow instructions.
8. When the parking maneuver is completed, STOP will be displayed.

### **PARK ASSIST SYSTEM FAULT**

If a system fault is detected, a continuous tone will sound and a message will be displayed in the message center. Contact your Retailer as soon as possible.