



LIGHTING CONTROL

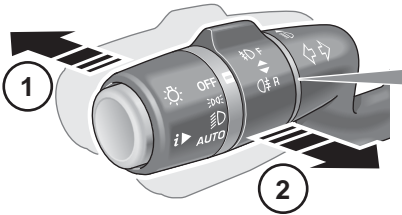

SL1727

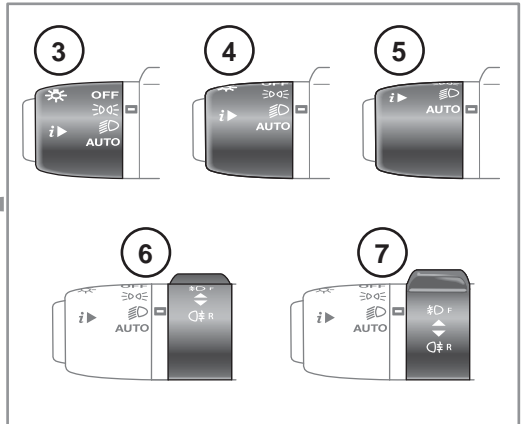

1. With the headlamps on, push the control away from the steering wheel to select high beam. The instrument pack warning lamp will illuminate.
- Note:** Do not use high beam where it may distract other road users.
2. Pull the control towards the steering wheel and release to flash the high beam on and off. The high beam will remain on for as long as the switch is held.
3. Sidelights.
4. Headlamps.
5. **AUTO.** With Auto lamps selected, when ambient light fades and the ignition is on, the side lamps, tail lamps, low beam headlamps and license plate lamps will switch on automatically. Headlamp courtesy delay, High beam assist and Windshield wipers detection may also be activated.

Note: Low exterior light levels, caused by adverse weather conditions, may also cause the Auto lamps to activate.

6. Rear fog lamps. Will operate only while sidelights, headlamps or Auto lamps are selected. Turn the collar towards the steering wheel and release. The instrument pack warning lamp will illuminate.
7. Front fog lamps. Will operate only while sidelights, headlamps or Auto lamps are selected. Turn the collar away from the steering wheel and release. The instrument pack warning lamp will illuminate.

In the event of a bulb failure, it should be noted that some bulbs are replaceable only by a Land Retailer/Authorized Repairer. See **167, CHANGING A BULB.**

HEADLAMP COURTESY DELAY

This feature operates whenever the lamps master switch is in the AUTO (5) position and the ignition is turned off. The headlamps will remain illuminated for up to 240 seconds.

Note: The time delay may be changed via the Vehicle settings menu. See **66, VEHICLE INFORMATION AND SETTINGS MENU.**