


## KEYLESS LOCKING

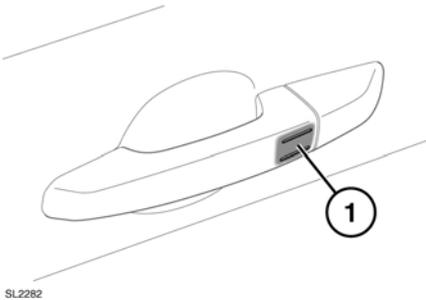

The vehicle will not lock automatically.

**Note:** Keyless locking will activate only if the Smart Key is detected outside the vehicle. If no Smart Key is present, no locking will occur.

- To lock the vehicle, touch only the lock sensor (1) once without grabbing the door handle.

**Note:** Do not place fingers round the back of the handle while touching the sensor. Doing so will prevent the vehicle from locking.

The hazard warning lamps will flash once to confirm locking.

**Note:** When locking the vehicle via Keyless locking, if one or more of the doors, the hood or the tailgate is not fully closed, or the ignition is ON, the vehicle will NOT lock. There will be NO audible mislock error warning. The hazard warning lamps will NOT flash and the door mirrors (if enabled) will NOT fold in. Check that all doors, the hood and the tailgate are closed properly. Ensure the ignition is turned OFF and lock the vehicle again. If the mislock persists, consult a Land Rover Retailer.

## DRIVE-AWAY LOCKING

Drive-away locking automatically locks all doors at a set speed when the vehicle is in motion. This feature can be enabled/disabled via Drive-away locking in the Vehicle Settings menu. See **66, VEHICLE INFORMATION AND SETTINGS MENU.**

## VALET MODE ACTIVATING

Valet mode allows the vehicle to be driven, e.g., by a parking attendant, but leaves the tailgate locked and restricts use of the touch screen. This prevents access to telephone numbers, navigation addresses and audio system settings.

From the **Home** menu, select **Valet**:

Enter a 4 digit Personal identification Number (PIN) (personally chosen). On completion, touch the **OK** soft key.

If you wish to cancel the PIN, select **Delete**.

After entering the PIN, you will be prompted to enter the PIN again. Enter the same PIN and touch **OK** to confirm.

A pop-up screen is displayed, confirming your vehicle is now in Valet mode.