
CONTROLS (FRONT TOUCH SCREEN)

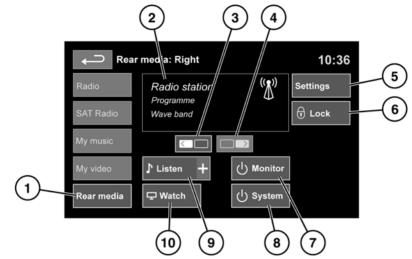

SL1946

See 109, TOUCH SCREEN HOME MENU.

- 1. Select rear media.
- 2. Current rear media display.
- 3. Left screen select.
- 4. Right screen select.
- 5. Settings menu.
- **6.** Remote control lock. Touch to prevent selections being made from the remote control.
- 7. Turns the selected screen on/off.
- 8. Rear media on/off, for the selected user.
- 9. Audio source select.
- 10. Video source select.

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

USING THE REAR MEDIA

Rear media consists of two screens. Separate programs can be viewed or heard by rear seat occupants. Supervisory control is made from the front screen. Audio and video programs for each or both sides of the rear media, can be selected from the Supervisor screen. The remote control can be locked out.

While the Supervisor screen is displayed, the remote control will be locked out.