TOPPING UP THE BRAKE FLUID

- Brake fluid will damage painted surfaces. Soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.
- Only use new fluid from an airtight container (fluid from opened containers or fluid previously bled from the system will have absorbed moisture, which will adversely affect performance, and must not be used).
- 1. Clean the filler cap before removing to prevent dirt from entering the reservoir.
- 2. Remove the filler cap.
- 3. Top-up the reservoir to the MAX mark using Shell DOT4 ESL brake fluid. If unavailable, use a low viscosity, synthetic compatible DOT4 brake fluid that meets ISO 4925 class 6 and Land Rover LRES22BF03 specification. Only fluid of this type and standard may be used.
- 4. Replace the cap and reservoir cover.

CHECKING THE POWER STEERING FLUID LEVEL

Power steering fluid is highly toxic.
Keep containers sealed and out of
reach of children. If accidental
consumption of fluid is suspected,
seek medical attention immediately.


If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of water.

Do not start the engine if the fluid level has dropped below the MIN mark.

Severe damage to the steering pump could result.

- Seek qualified assistance immediately if there is a noticeable drop in the fluid level. Severe damage to the steering pump could result.
- If fluid loss is slow, the reservoir may be topped-up to the upper level mark to enable the vehicle to be driven to a repair facility for examination. However, it is recommended that you seek qualified assistance before driving the vehicle.

Check and top-up the fluid with the vehicle on level ground, engine switched off, and the system cold. Ensure that the steering wheel is not turned after stopping the engine.

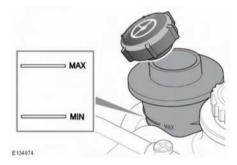

The level of fluid can be seen through the translucent body of the reservoir.

The fluid level should be between the **MIN** and the **MAX** marks.