



FOLDING AND RAISING THE THIRD ROW SEATS

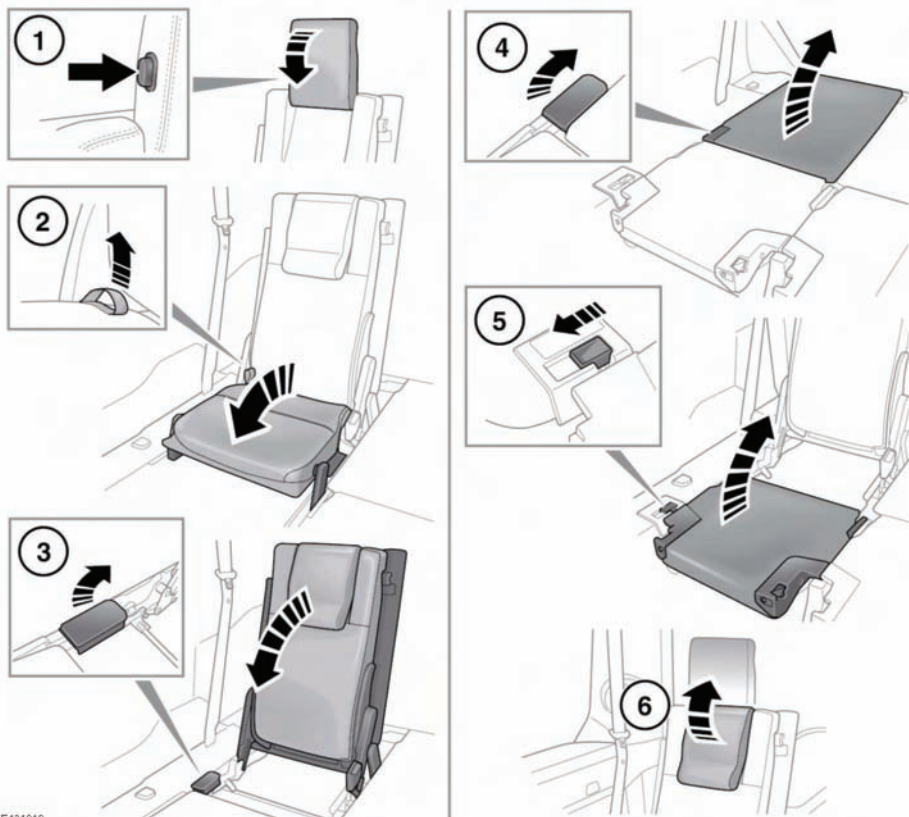

E134919

- 1. To fold:** Press the head restraint release button, and fold the head restraint fully downwards.
 - 2.** Pull up the release strap (located at rear of cushion) to release the seat. This may require moderate force. Fold the cushion fully forwards until it latches into position.
 - 3.** Pull up the backrest lever and fold the backrest fully forwards, until it latches into position in the loadspace floor.
 - 4. To erect:** Pull backrest lever to release the backrest, and raise to the upright position. Ensure it is fully latched into position.
 - 5.** Release the catch to raise cushion. Push into place, ensuring the cushion is latched to the backrest.
 - 6.** Raise the head restraint until it latches into position.
-  **The head restraint must always be raised when using the third row seats.**