


**Note:** Place face down on a flat surface covered in a soft material to prevent damage to the unit's lenses

- To access the direction indicator, static bending lamp and side lamp, the headlamp unit locking slide assembly must be completely removed from the unit.

To remove the slide assembly, remove the four screws (arrowed). When refitting the slide, do not overtighten the screws.

**Note:** Refitting the headlamp unit is the reverse of removal.

## HEADLAMP BULB IDENTIFICATION

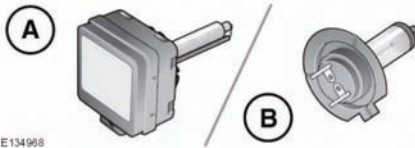

E134968

- Xenon bulb.
- Halogen bulb.

## HALOGEN BULBS

Dependent on vehicle specification, halogen bulbs may be used for high beam, low beam, and front fog lamps. Take care not to touch the glass part of the bulb with your fingers; always use a cloth to handle the bulb. If necessary use methylated spirits to remove finger prints.

## XENON LAMPS



**Replacement or maintenance of Xenon lamps should only be carried out by suitably qualified personnel.**



**High voltage is required to ignite the gas and metal vapour which are used to power Xenon lamps. Contact with this voltage can cause serious injury.**



**Xenon lamp units operate at a very high temperature. Ensure that the lamp units have cooled before attempting to touch them.**





**Xenon lamp units contain Mercury which is highly toxic, and can be extremely harmful.**



Seek advice about the correct disposal of Xenon lamp units from a Land Rover Dealer/Authorised Repairer, or your local authority.

## XENON HEADLAMP BULB REPLACEMENT

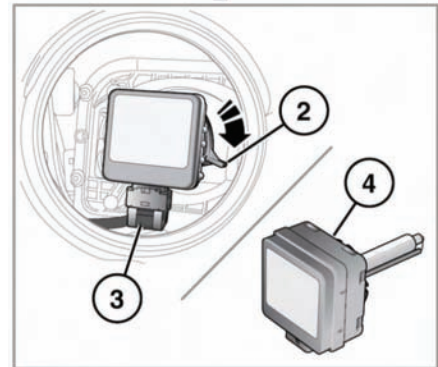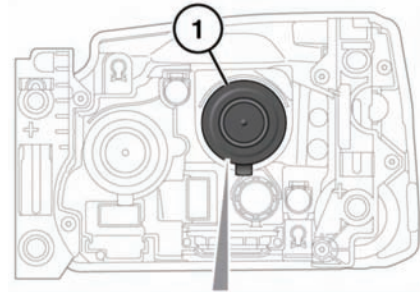

E135155

- Twist and lift off the domed cap.
- Rotate the collar securing the bulb to the lamp and release the bulb.