



# Wheel changing



## JACKING POINTS AND JACK TYPE - COIL SUSPENSION

 Due to the nature of coil suspension systems, it is not possible to raise the wheel clear of the road surface by jacking under the chassis.

 Only jack the vehicle using the jacking points described, or damage to the vehicle could occur.

**Note:** Your vehicle may be fitted with a tilt sensor which activates the alarm if the vehicle is tilted in any direction after it has been locked. To lock the doors while changing the wheel, and avoid the alarm activating, turn off the alarm sensors in the vehicle set-up menu. See **56, INSTRUMENT PANEL MENU**.

## OPERATING THE JACK - COIL SUSPENSION

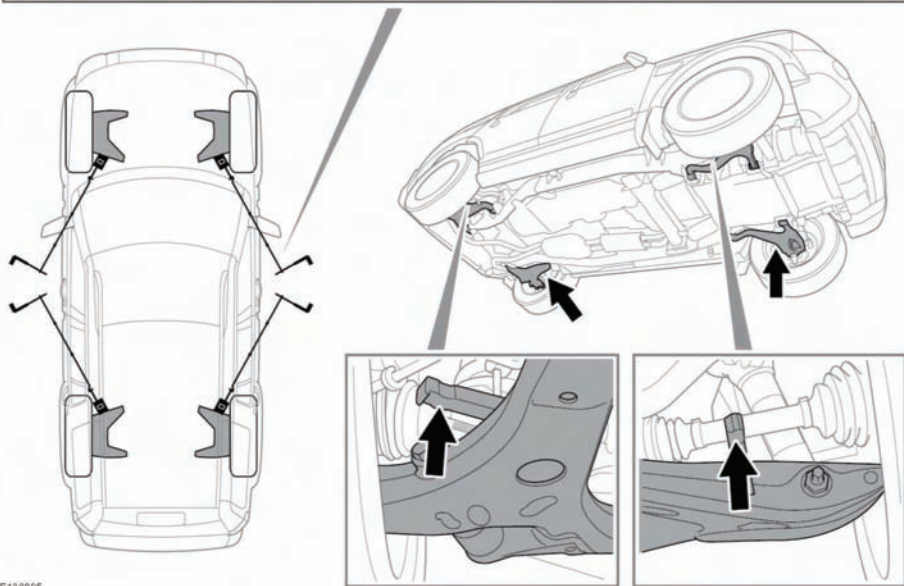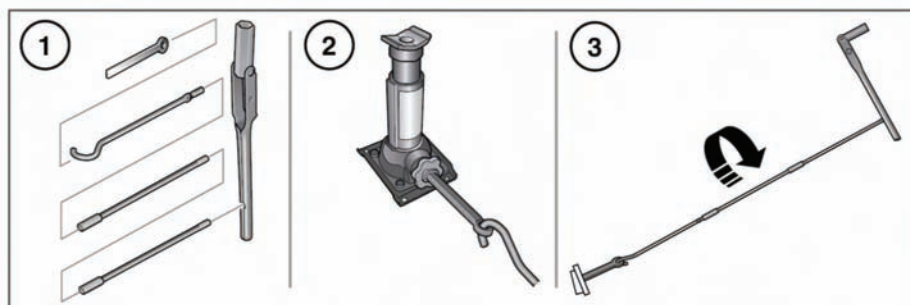

E139095