

Maintenance

- **3.** Pull off the electrical connector and remove the bulb unit.
- Insert the new bulb unit and reverse the above procedure. Ensure that the lugs on the cap are in contact with the bulb base.

HEADLAMP BULB REPLACEMENT - HALOGEN LOW BEAM

Take care not to touch this type of bulb with your fingers; always use a cloth to handle them. If necessary, clean the bulb with methylated spirits to remove fingerprints.

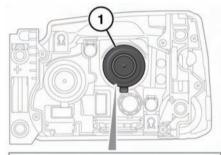

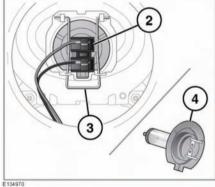


- 1. Twist and lift off the domed cap.
- 2. Pull off the electrical connector.
- 3. Release the spring clip securing the bulb to the lamp and remove the bulb.

4. Insert the new bulb and repeat the above procedure in reverse order.

HEADLAMP BULB REPLACEMENT - HALOGEN HIGH BEAM

Take care not to touch this type of bulb with your fingers; always use a cloth to handle them. If necessary, clean the bulb with methylated spirits to remove fingerprints.

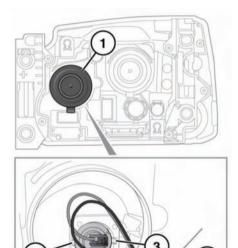

Todak and the attales de

- Twist and lift off the domed cap.
 Pull off the electrical connector.
- **3.** Release the bulb from the retaining tags and remove bulb.
- **4.** Insert the new bulb and repeat the above procedure in reverse order.