


MAIN MENU

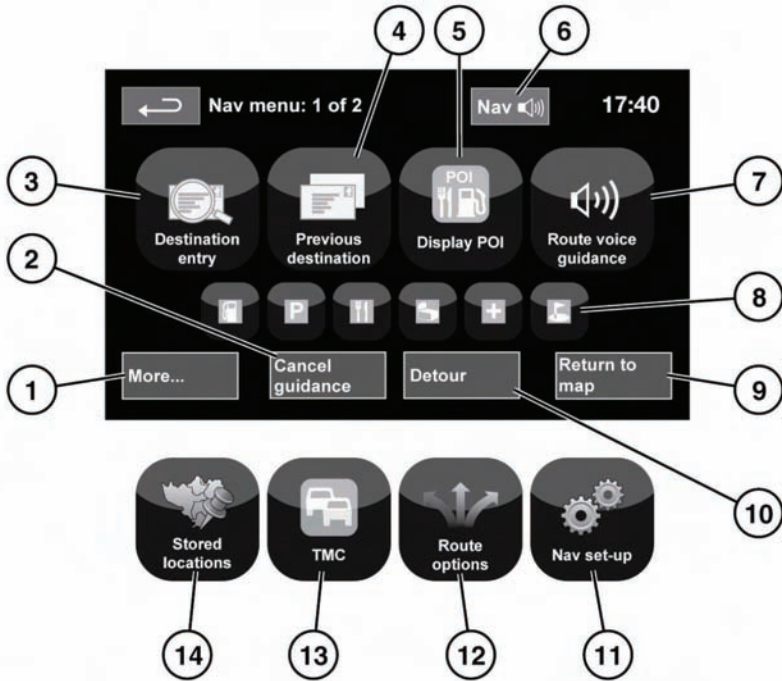

E141771

1. **More...:** Displays the other Nav menu screen.
2. **Cancel guidance:** Cancels current route guidance.
3. **Destination entry:** Provides a choice of options for entering a destination.
4. **Previous destination:** Displays previous destinations entered.
5. **Display/Hide POI:** Turns the POI (Point Of Interest) icons on the map on/off.
6. When a destination is set, a soft key is displayed, which enables the last voice instruction to be repeated.
7. **Route voice guidance:** Allows the voice guidance messages to be turned off for the current journey. The soft key is highlighted while voice guidance is enabled.
8. **Quick POI shortcuts.** This provides the option to quickly enter a destination of a local POI. The categories can be changed in the Navigation setup menu.
9. **Return to map:** Advances to the main map screen.
10. **Detour:** Allows a detour from the current route.
11. **Nav set-up:** Settings for the navigation system.
12. **Route options:** Allows selection of various options for the route.