If the audio system is in use when a phone call is active, the audio source is suppressed for the duration of the call. Parking aid warnings are not suppressed.

## TIME AND DATE SETTINGS

To set/change the time and date:

- 1. Press the MENU button (12).
- 2. Select Clock Settings on the screen menu.
- 3. Select a clock function, make changes.
- **4.** Once the change has been entered, press **OK**.

## MP3 FILE PLAYBACK

MP3 discs have the potential to hold more music than a conventional CD, because each track can be compressed to a higher degree during recording.

The normal playing sequence on CDs with multiple folders, is to play the tracks within the top level first, then the tracks in any sub-folders.

**Note:** The CD player may take a long time to load an MP3 disc if it contains a lot of tracks.

To select a track from the MP3 track list:

- Press the right side of the menu navigation control (10) to access the currently playing MP3 folder.
  - If required, press the left side to access the folder list.
- Press the up or down arrows on the menu navigation control to scroll to the required track or folder.
- **3.** Press the **OK** button to play the selected track or open the selected folder.

## **MP3 REPEAT AND SHUFFLE**

When an MP3 CD is playing, playback options include **Repeat** and **Shuffle**.