


ELECTRIC WINDOWS

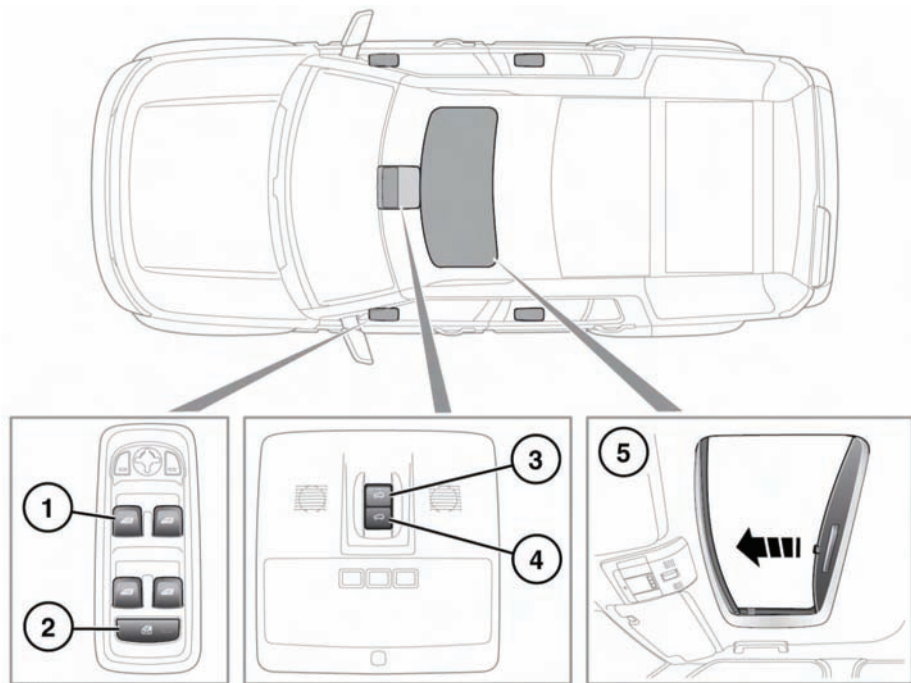

E134836

1. Window switches:

The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

All 4 windows have one-touch operation. Briefly pull the switch up fully and release, the window will continue to raise until fully closed. Briefly press the switch down fully and release, the window will continue to lower until fully open. Pressing or pulling the switch again will stop the window.

2. Rear window isolator button.



If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.

3. Sunroof close/tilt switch:



Wherever possible remove any snow, ice, dirt, and leaves etc. from the sunroof mechanism before closing. Failure to do so may damage the sunroof mechanism.

- With the roof closed, briefly press to tilt the sunroof open.