


REMOTE CONTROL

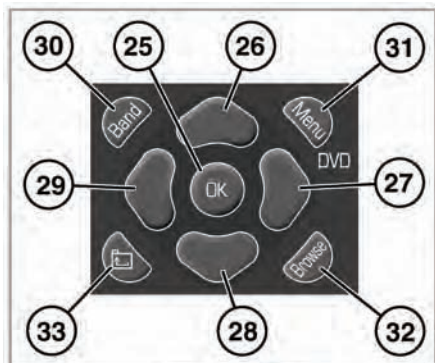

E148794

1. RSE on/off.
2. Cabin audio on/off (operates in Limousine mode only).
3. Cabin audio volume increase/decrease (operates in Limousine mode only).
4. Right user system select.
5. Screen brightness control: Select from day, night and auto.
6. Video screen format/zoom.
7. Rear USB socket select (video).
8. AUX socket input select (video).
9. iPod input select.
10. DAB radio select (market dependant).
11. Rear USB socket select (audio).
12. Indicates colour of buttons with audio function.
13. Data disc select (audio).
14. Indicates colour of buttons with video function.
15. SAT radio select (market dependant).
16. CD select.
17. Radio select.
18. DVD select.
19. Data disc select (video).
20. TV select.
21. Screen on/off.
22. Left user system select.
23. Seek forward and backwards for selected source and next/previous chapter for DVD.
24. Play/Pause for all non-live media (USB/ iPod/ CD/ DVD/ Data Disc).
25. Press to select highlighted station/channel.
26. TV presets list: First press displays list, further presses navigate up list.