## WINDOW RESET

The windows will need to be reset if the battery is disconnected, becomes discharged or power supply is interrupted.

Reset as follows:

- 1. Close the window fully.
- 2. Release the switch, then lift it to the close position and hold for 1 second.
- 3. Repeat the procedure on each window.

## SUNROOF RESET

If the battery is disconnected or the power supply is interrupted whilst the sunroof is partially open, it will need to be recalibrated.

Once the battery is reconnected or the power supply is restored, recalibrate the sunroof as follows:

- 1. Switch the ignition on.
- 2. With the sunroof closed, press and release the front of the switch. The sunroof will move to the tilted position.
- **3.** Press the front of the sunroof switch and hold for 20 seconds.
- After 20 seconds, the sunroof will begin to move. Keep the front of the switch pressed until the fully open/close cycle has completed.
- **5.** Once the sunroof has stopped moving, release the switch.

The sunroof can now be operated as normal.

## **CLEANING THE EXTERIOR**

- Remove any heavy deposits of mud and dirt with a hose, before washing the vehicle.
- Never aim the water jet directly at the engine air intake, heater air intakes, body seals (doors, sunroof, windows etc.) or at any components which may be damaged (lights, mirrors, exterior trim etc.).
- O Do not use a power wash system in the engine bay area.
- Following cleaning of the vehicle exterior (particularly with a pressure washer), it is recommended that the vehicle is taken for a short drive to dry out the brakes.
- Substances which are corrosive, such as bird droppings, can damage the vehicle's paintwork and should be removed as soon as possible.
- Use only cleaning products approved for use on vehicles.
- Do not apply polish to any unpainted areas of bumper mouldings. It will become ingrained in the textured finish.

## **UNDER BODY MAINTENANCE**

Regularly flush the underbody with plain water, and pay particular attention to areas where mud and debris collect.

If damage or corrosion are detected, have the vehicle checked by a Land Rover Dealer/Authorised Repairer as soon as possible.