
Front seats

DRIVING POSITION MEMORY

Once you have adjusted the power operated driver's seat, steering column (see 23, ADJUSTING THE STEERING WHEEL) and exterior mirrors (see 16, DRIVING POSITION MEMORY) for your ideal driving position, the vehicle can memorise these settings for future use.

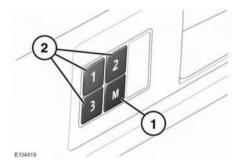

- 1. Press the memory store (M) button to activate the memory function.
- Press one of the preset buttons within 5 seconds to memorise the current settings.
 MEMORY (1, 2 or 3) SETTINGS SAVED will be displayed on the message centre, accompanied by an audible chime to confirm the settings have been memorised.
- To recall a stored position press the relevant preset button. MEMORY (1, 2 OR 3) RECALLED will be displayed in the message centre.

A seat position will only be memorised during the 5 second active period.

Any existing settings will be over-written when programming a memory position.

FOLDING ARMREST



If fitted, the folding armrest may be stowed by moving to the vertical position. Use the adjuster wheel (arrowed) to set the required height.