


DRIVING POSITION MEMORY

Once you have adjusted the power operated driver's seat, steering column (see **23, ADJUSTING THE STEERING WHEEL**) and exterior mirrors (see **16, DRIVING POSITION MEMORY**) for your ideal driving position, the vehicle can memorise these settings for future use.

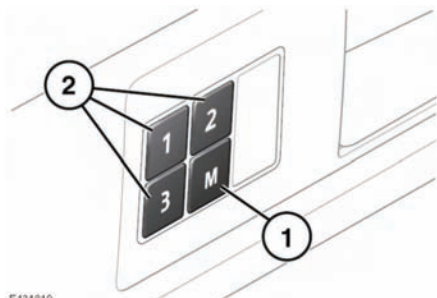


1. Press the memory store (**M**) button to activate the memory function.
2. Press one of the preset buttons within 5 seconds to memorise the current settings. **MEMORY (1, 2 or 3) SETTINGS SAVED** will be displayed on the message centre, accompanied by an audible chime to confirm the settings have been memorised.
3. To recall a stored position press the relevant preset button. **MEMORY (1, 2 OR 3) RECALLED** will be displayed in the message centre.

A seat position will only be memorised during the 5 second active period.

Any existing settings will be over-written when programming a memory position.

FOLDING ARMREST

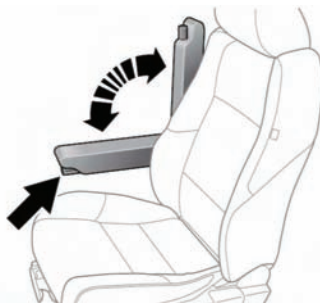

If fitted, the folding armrest may be stowed by moving to the vertical position. Use the adjuster wheel (arrowed) to set the required height.