


ADJUSTING HALOGEN HEADLAMPS

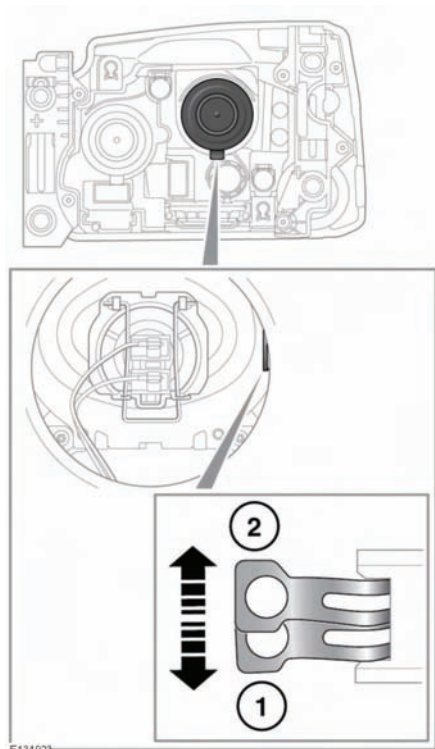

1. Lever in the correct position for the market where the vehicle was originally sold.
2. Lever in the correct position for when driving in countries where they drive on the opposite side of the road.

With the domed cap removed, depress the lever and move to the appropriate position.

HEADLAMP LEVELLING

(Halogen headlamps only)

Use the headlamp levelling control to account for vehicle loading changes.

Vehicle load	Switch position
Driver only	0
Driver and front seat passenger	0
Driver and passengers in all seats	Rotate down one position from 0.
Maximum gross vehicle weight	Rotate down two positions from 0.
Maximum rear axle load	Rotate down three positions from 0.

HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.