
SURROUND CAMERA SYSTEM

The camera home page is accessed from the Home menu screen. If Cameras has not been set as a short cut, touch Extra Features to display the list.

With the engine running and Park or Neutral selected, the surround camera system uses 5 discretely placed cameras to assist in manoeuvring the vehicle.

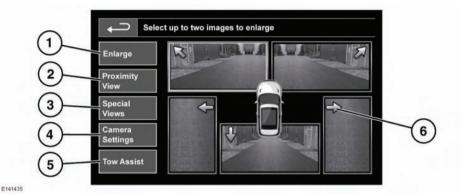

 Enlarge: To enlarge a camera view, touch the image then touch the Enlarge soft key. Any 2 images can be selected and enlarged to view side-by-side on the screen.

When viewing the 2 images, one of them can be selected to view as a full screen image. It can then be zoomed into and panned around using the magnifier and arrow icons.

2. **Proximity View:** Touch to select a combination of 3 images from the front and passenger side cameras.

Automatic Proximity View - Japan only: When Drive or Reverse is selected, the forward or rear view will be displayed. Once the vehicle speed exceeds 18 km/h (11 mph) or the return icon is pressed, the camera screen will disappear.

Note: Proximity view can be accessed at any time by touching Proximity View on the Camera home page.

- Special Views: Touch to display a selection of pre-set views. They are provided to assist with difficult manoeuvres and are:
 - **Kerb view:** Shows views from the 2 side cameras
 - Junction view: Shows views from the 2 front cameras.
 - Trailer view: Shows the rear camera view.
- 4. Camera Settings Japan only: Touch to access the camera options page. To deactivate the Semi-auto camera functionality select Off. The Proximity view is now only accessible by manual activation using the Proximity View soft key.
- **5. Tow Assist:** Touch to display trailer guidance set-up screen.