

Exiting the vehicle

To initiate global window closing, press and hold the keyless locking button for 3 seconds. This will also lock the vehicle and activate the alarm.

Note: *The windows will close only while the button is depressed. To fully secure the vehicle, continue to depress the button until all windows are fully closed.*

DEACTIVATING THE ALARM WHEN TRIGGERED

If the alarm has been triggered it can be deactivated by pressing the Smart Key unlock button, or by positioning the Smart Key underneath the steering column, see **79, IF THE ENGINE FAILS TO START.**