


WHEEL AND TYRE SIZES (Saudi Arabia and China only)

Wheel size	Tyre size	Load index
5.5J x 19	T175/80 R19 M (Temporary spare)	122
7.0J x 17	235/70 R17 H	111
8.0J x 18	255/60 R18 V	112
8.0J x 19	255/55 R19 V	111
8.5J x 20	255/50 R20 Y	109

ACCESSORY WHEELS AND TYRES

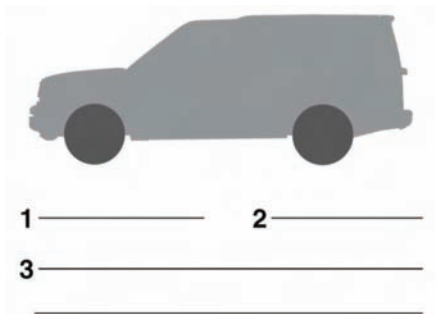

E134875

Note: Use the diagram above to record accessory wheel and tyre information.

1. Front tyre pressure.
2. Rear tyre pressure.
3. Wheel and tyre information (size, speed rating, etc.).



Contact a Dealer/Authorised Repairer before fitting any accessory wheels and tyres.

WHEEL ALIGNMENT DATA

Wheel alignment - front	+0.16° ± 0.2°
Wheel alignment - rear	0.24° ± 0.14°
Camber - front left	-0.15° ± 0.75°
Camber - front right	-0.5° ± 0.75°
Camber - rear left	-0.75° ± 0.75°
Camber - rear right	-0.75° ± 0.75°
Castor - front left	3.86° ± 0.75°
Castor - front right	4.17° ± 0.75°

BRAKE PEDAL TRAVEL

The brake pedal travel is set at the factory and is non-adjustable.