Vehicle recovery



Do not tow the vehicle if the gearbox cannot be set in neutral, or the rear electronic differential has failed in the locked position.

Your vehicle has a permanent four-wheel drive system and is fitted with a steering lock. The following procedure must be carried out carefully to prevent damage to the vehicle:

- 1. Secure the towing attachment from the recovery vehicle to the front towing point.
- 2. With the parking brake applied, switch on the ignition.
- **3.** Apply the foot brake and place the gear lever into neutral.
- **4.** Switch off the ignition and leave the Smart Key in a secure place within the vehicle.
- **5.** The ignition may be switched on to allow operation of indicators, brake lamps etc.
- **6.** Release the parking brake before towing the vehicle.



Leaving the ignition switched on for extended periods will drain the vehicle battery.

AFTER TOWING ON FOUR WHEELS

- 1. Apply the parking brake.
- **2.** Switch on the ignition and apply the foot brake.
- **3.** Place the auto selector lever in the park position.
- **4.** Switch off the ignition and remove the Smart Key from the vehicle.
- **5.** Remove the towing attachment and refit the cover to the front towing point.



Use extreme caution when detaching towing equipment. Vehicle movement is possible which can result in serious injury.