



FRONT CLIMATE CONTROL

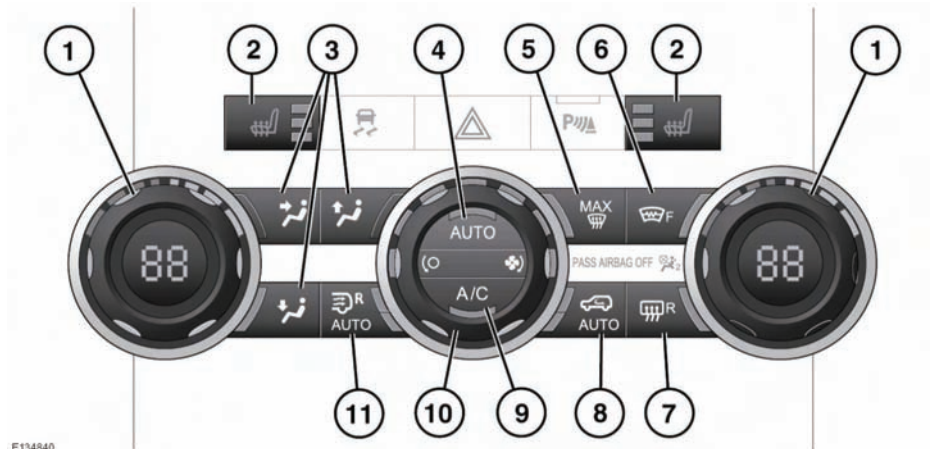

E134840

1. Temperature controls: Individual for driver/passenger settings.
 2. Seat heaters:
 - Press once to turn on high, twice to turn on medium, three to turn on low and a fourth time to turn off.
 3. Air distribution buttons:
 - Windscreen and side window vents.
 - Face level vents.
 - Foot level vents.

Note: More than one setting may be selected at a time to achieve the desired distribution.
 4. Auto mode: For fully automatic operation.
 5. Maximum defrost mode.
 6. Heated front windscreen: Will deactivate after a predetermined length of time.
 7. Heated rear screen: Will deactivate after a predetermined length of time.
-  Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.
8. Recirculation:
 - Press for timed recirculation.

Note: The time is automatically determined to prevent glass mist. Ambient air temperature and status of the air conditioning system will affect the time period.
 - Press and hold for latched (continuous) recirculation.

Note: Prolonged continuous use will increase the risk of glass mist.
 - To cancel recirculation, press the button again.
 9. Air conditioning on/off: With air conditioning off, the system operates in economy mode, improving fuel economy.

Note: Using the system without air conditioning for long periods can cause the windows to mist.
 10. Blower control:
 - Rotate to adjust blower speed.
 - Rotate fully counter-clockwise to turn the climate control system off.